


# PROPER INSTALLATION OF HORIZONTAL TIE-OFF SUPPORT

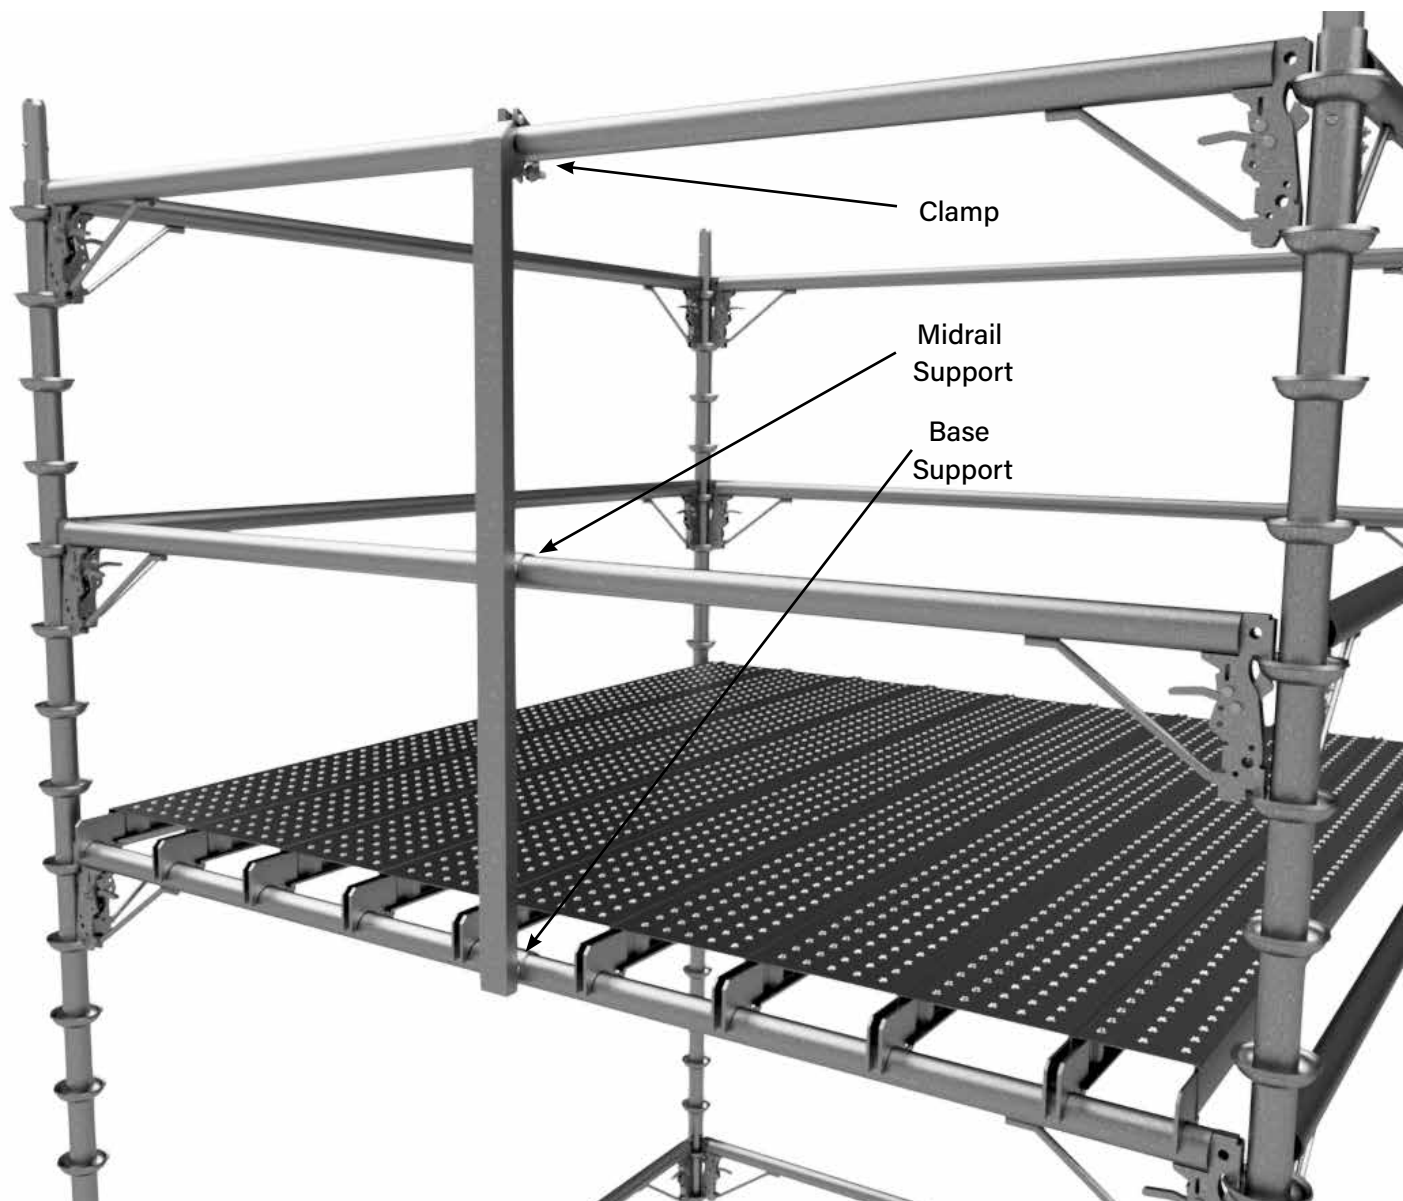

The proper way to attach a horizontal tie-off support to the horizontals is in the center of the horizontal with the clamp attached to the handrail. The clamp should slide over the handrail and the bolt should be at the bottom of the horizontal.

The top clamp may appear to be installed upside down, and this may seem improper for experienced builders since a fall will put pressure on the handrail and push down on the bolt.

The horizontal tie-off support was designed, so that if the bolt came loose the flap would prevent the horizontal tie-off support from falling off the scaffold.

**All material must be inspected prior to use!  
See inspection guidelines on page 112.**